


EGSM – BECCLES AERODROME

N52.26.12 E001 37.10. 80ft ASL 3hPa. 2nm SE of Beccles, 5nm SW of Lowestoft.

CLN 114.55 025 39.3nm

c/s Beccles Radio,
AGCS.

120.380

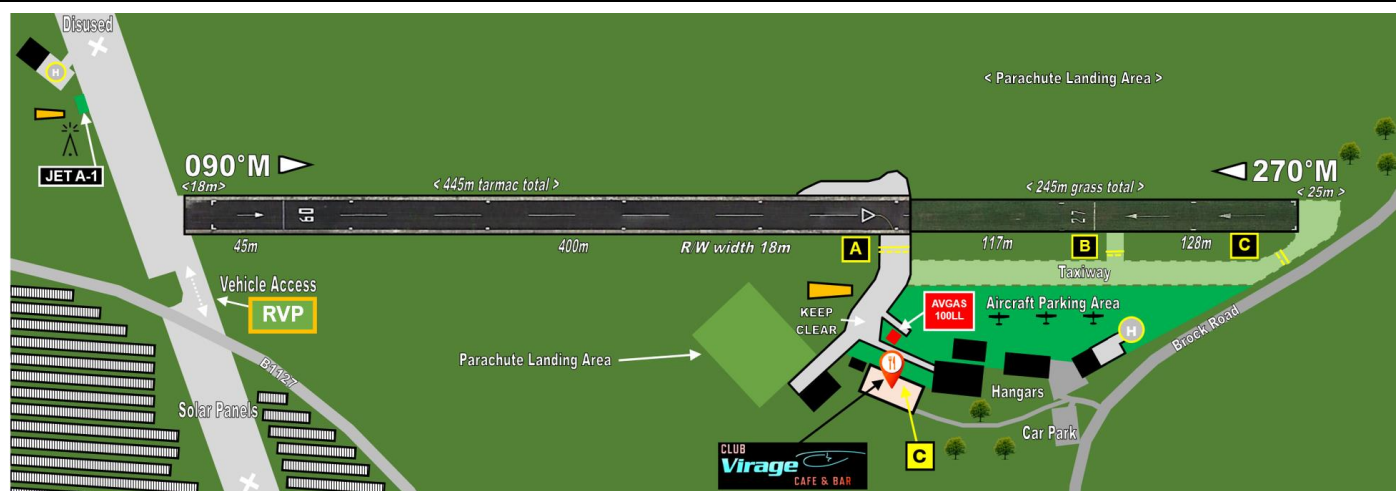

Runway	Surface	TORA	ASDA	LDA	TODA	Width	Lighting	If grass closed:			
								TORA	ASDA	LDA	TODA
09	Tarmac / Grass	690m	715m	645m	715m	18m	Nil	445m	715m	400m	715m
27	Grass / Tarmac	690m	708m	562m	708m		Nil	445m	463m	445m	463m

Operating hours: 0800-1800 Local (Summer) 0800-1600 Local (Winter).

PPR by website <https://www.becclesaerodrome.co.uk/ppr> or telephone.

If your flight is cancelled, please ensure that you telephone us.

Landing fees: £10 fixed wing/microlight, £15 helicopter, £50 commercial. Landing fee includes a free tea/coffee.

Sign in/out at Virage Café/Bar via path at 'C' sign to the left of the viewing area.

Remarks: Unlicensed aerodrome. Fixed wing, microlights and helicopters welcome. Circuits at 1000ft QFE. All circuits to the south of the airfield (27 left-hand circuit / 09 right-hand circuit). Downwind joins preferred. Helicopters operating on a section of disused runway to the north of the threshold of runway 09. Establish contact with Beccles Radio on 120.380 at least 10 minutes away using 'request join' and please 'pass your message' when requested. Information and parachute status will be provided once your details are passed. Non-radio aircraft not accepted for safety reasons.

Warnings: Beware of motor vehicles accessing the disused runway and crossing by the approach threshold of RW09. Freefall parachuting takes place up to FL130. 'Parachute status' may be requested from Beccles Radio at any time and will also be provided once taxi information or join is requested.

Parachuting Procedure: The local procedure is that aircraft remain clear of the Drop Zone after the 5-minute call, unless they can arrive/depart in the remaining time. Taxiing is suspended during a parachute drop, however engines may be started (except for heli/gyro rotors).

Caution: Runway width is less than the total width of the paved surface. Grass areas of the runway and apron may be closed during wet weather.

Noise Abatement: Please avoid overflying local villages. When departing from RW09, please turn right onto heading 110° as soon as possible for noise abatement.

Airmanship: All pilots must report ready for departure and receive information from the AGCS operator before entering the runway. They must also advise the AGCS operator if they wish to change frequency.

Fuel: AVGAS and Jet A1 available.

Restaurant: Club Virage Café/Bar available. Please check website for opening hours.

Please book in advance during busy periods to avoid disappointment.

Other facilities: Aerodrome accommodation, outside parking and car hire available. Fixed wing, helicopter and microlight training and aircraft hire available. For full details please see website.

Operator: Hornbill Aero Services Ltd. Beccles Aerodrome, Brock Road, Ellough, Beccles, Suffolk NR34 7PJ.

Tel: 01502 476074 / 07920 067285

Email: ops@becclesaerodrome.co.uk

Website: www.becclesaerodrome.co.uk